

swissvoice

Xtra 1110




USER'S GUIDE

TABLE OF CONTENT

DESCRIPTION OF TELEPHONE Xtra 1110	2
INSTALLATION	3
Recommendations	3
Telephone installation	3
Wall mounting	3
Insert a photo (or the SOS label) on one of the 6 memory keys	3
GENERAL USE	4
Make a call	4
CALL from memories or emergency number (SOS)	4
Dial back an outgoing number	4
Answering a call	4
Set hands-free volume	4
Set handset volume (And audio-boost)	5
Enable audio-boost (+30 dB)	5
Handset receiver equalizer adjustment	5
PROGRAMMING	6
Program memory keys (SOS, Photos and M1, M2)	6
Setting flash time	6
Setting tone or pulse mode	6
SECURITY	6
ENVIRONMENT	7
Conformity	7

DESCRIPTION OF TELEPHONE Xtra 1110

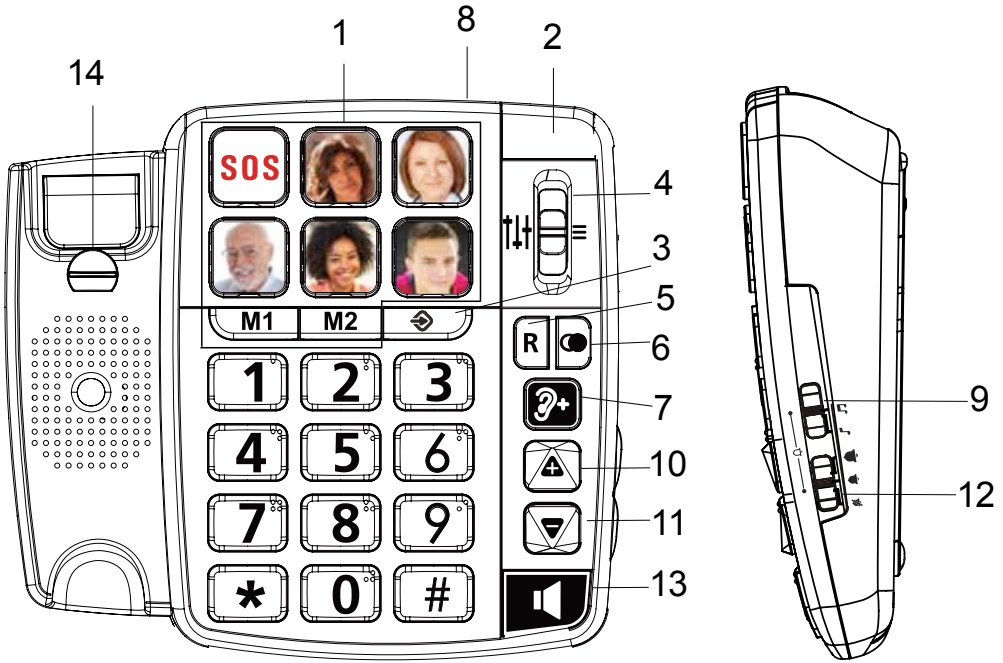

1. 8 one touch direct memories (SOS, Photos, M1 and M2)
2. Indicator: Ringer (incoming call)
3. Program key
4. Handset Receiver Equalizer
5. Flash key
6. Redial key
7. Audio boost (Handset receiver volume amplify)
8. Audio boost override
9. Ringer pitch
10. & 11. Handsfree or Handset volume increase/decrease
12. Ringer volume switch
13. Handsfree key
14. Hanger knob


INSTALLATION

Recommandations

- Do not expose the phone to direct sunlight or excessive temperature.
- Operating temperature between + 5 ° C and + 40 ° C.
- Your phone must be installed at least 1 meter away from radio equipment such as television, cell phone, etc.

Telephone installation

- Your phone should be placed on a flat surface for more stability. Plug the coiled cord into the handset (A) and into the socket on the left side of the phone (B).
- Plug the telephone cord into the socket at the back of the set and into the wall outlet (C) or into the telephone port of the internet box. For desktop position, raise the 2 feet under the base (D).

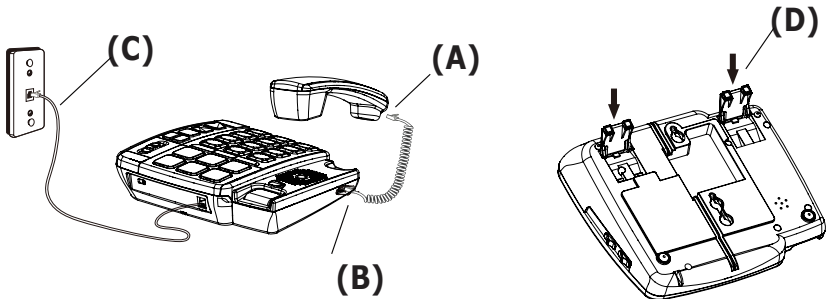

Wall mounting



- Fold the 2 feet under the base (D).
- Flip the small plastic piece on the base (14).
- Drill two 6mm holes spaced 100mm apart. Insert 2 wall plugs and screw in the wood screws (3.5 mm in diameter and 30 mm long).
- Mount the base to the 2 screws by pulling it downwards.

Insert a photo (or the SOS label) on one of the 6 memory keys



- Remove the transparent cover attached to the photo memory button.
- Cut out the chosen photo using the provided photo cutting guide.
- Put the photo on the key and replace the transparent cover on the photo.

GENERAL USE



Make a call

- Pick up the handset or press the  key.
- Dial the number using the keypad.
- To end the call : Put back the handset on the base or press the  key.



Call from memories or emergency number (SOS)

- Pick up the handset or press  key.
- Press the photo key, M1, M2 or SOS according to your choice. To register a number on these keys, see "Program memory keys."
- At the end of the call, hang up the handset or press  key.



Dial back an outgoing number

- Pick up the handset or press the  key.
- Press the  key.

Answering a call

- To answer : pick up the handset or press the  key (hands-free mode).
- To hang up : replace the handset on the base or press the  key.

Set hands-free volume

- During (hands-free) conversation.
- Press  to increase the volume.
- Press  to decrease the volume.
- 8 levels can be selected.

Set handset volume (And audio-boost)

During handset conversation, 2 modes of amplification are available:

- **Standard mode**


Press ▲ or ▼ to increase or decrease (4 levels).

- **Audio boost mode** (extra strong up to + 30dB)

During handset conversation, press the 🔊 key. Press this button again to stop amplification.



A slider on the back of the phone (AMPLIFY) is used to always activate the audio boost function. By default, the position is "OFF" If it is in the "ON" position, the audio boost will be automatically activated at each call.

Handset receiver equalizer adjustment

Slide the switch to adjust the handset receiver sound frequency pitch (bass or treble) .

PROGRAMMING

Program memory keys (SOS, photos and M1, M2)

- 1) Pick up the handset.
- 2) Press  .
- 3) Dial the phone number to be stored, eg 0612345678.
- 4) Press the memory key dedicated to this number (SOS, Photos, M1 or M2).
The SOS number is the one you want to reach in case of emergency.
- 5) Hang up the handset. It is advisable to make a test to verify the registered number is correct.
- 6) To change the number, repeat the procedure from 1).

Setting flash time

By default, the programmed flash time is 300ms . If change is needed:

-  +  /  /  /  /  /  = 100ms
-  +  /  /  /  /  /  = 300ms
-  +  /  /  /  /  /  = 600ms

Setting tone or pulse mode

By default, the TONE mode is programmed. To modify it:

-  +  /  /  /  /  /  = pulse
-  +  /  /  /  /  /  = tone

SECURITY

Do not use your telephone to report for a gas leak or other potential explosion hazard. Do not try to open your phone to avoid electrical shock. Your telephone must be installed in a dry place, away from heat, humidity and direct sunlight.

ENVIRONNEMENT



This symbol means that your inoperative appliance must be collected separately and not mixed with the household waste.

■ *Help us preserve the environment in which we live!*

CONFORMITY

The logo printed on the products indicates the conformity with all essential requirements and all applicable directives. You can download the Declaration of Conformity from our website:www.swissvoice.net

www.swissvoice.net

ATLINKS Europe
147 avenue Paul Doumer
92500 RUEIL-MALMAISON France
RCS Nanterre 508 823 747

© ATLINKS 2018 - Reproduction prohibited.

The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.

SWISSVOICE and ATLINKS are registered trademarks.
The SWISSVOICE logo is trademark under license by ATLINKS.

Swissvoice Xtra 1110
A/W No.: 10001931 Rev.0 (EN)
Printed in China